



MX650W

TripleWhip™ Hand Mixer



Owner's Guide

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. To protect against the risk of electrical shock do not immerse power unit in water or other liquid.
3. Close supervision is necessary when mixer is used by or near children.
4. Unplug from outlet when not in use, before putting on of taking off parts and before cleaning.
5. Avoid contact with moving parts. Keep hands, hair, clothing as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
6. Remove beaters from mixer before washing.
7. Do not operate appliance with a damaged cord or plug or after appliance malfunctions, or is dropped or damaged in any manner. Call Rival® Customer Service (see warranty) to return for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by Rival® may cause fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surface, including stove.

SAVE THESE INSTRUCTIONS

This appliance is for **HOUSEHOLD USE ONLY**. No user-serviceable parts inside. Do not attempt to service product. Power unit never needs lubrication.



POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ASSEMBLING YOUR HAND MIXER

TO INSERT BEATERS

CAUTION: Be sure mixer is unplugged.

When mixer is resting on its **HEEL** and holding the **HANDLE** of the **MIXER BODY**, insert the **BEATER** with the **RED GEAR WHEEL** into the slot with the **RED RECESS**. Push firmly until it locks into position. Then insert the **BEATER** with the **BLUE GEAR WHEEL** into the slot with the **BLUE RECESS** and push firmly into position. Repeat with the last **BEATER** in the remaining slot.

DOUGH HOOKS

Insert the DOUGH HOOK with the LARGE COLLAR into the SLOT with the RED RECESS and push firmly until it locks into position. Repeat by placing the other DOUGH HOOK into the smallest slot. **(NOTE: NOT** in the slot with the blue recess.)

TO REMOVE BEATERS/DOUGH HOOKS

- Turn MIXER SPEED CONTROL to “OFF” (O) and unplug. Hold the hand mixer over worktop and push the ejector button firmly. BEATER/DOUGH HOOKS will unlock for easy removal.
- **CAUTION:** Do not attempt to eject the attachments while operating the hand mixer.

HOW TO USE YOUR HAND MIXER

- Make sure the MIXER SPEED CONTROL is in the “OFF” position, and BEATERS/DOUGH HOOKS are locked in place. Plug into 120V AC outlet.
- Place BEATERS/DOUGH HOOKS in the mixture and turn the mixer onto speed 1. Increase speed as directed in the appropriate recipe (see Mixing Guide).
- Guide mixer through the center and around the sides of the mixing bowl. Turn mixer off and scrape around the side of the bowl as needed.
- When mixing is complete, turn MIXER SPEED CONTROL to “OFF”. Then lift the BEATERS out of the food. Always turn mixer off before removing from bowl.
- Unplug the mixer and press the EJECTOR BUTTON firmly to release the BEATERS.
- **CAUTION:** Do not attempt to eject BEATER/DOUGH HOOKS while operating the hand mixer.

MIXING GUIDE

1. **SPEED 0** – Mixer is in “OFF” position.
2. **SPEED 1** – Use for starting and slow mixing, such as to blend dry and liquid ingredients, or to break up potatoes for mashing.
3. **SPEED 2** – Prepare muffins and quick breads.
4. **SPEED 3** – Prepare cake batters, sauces, and instant puddings.
5. **SPEED 4** – Use for creaming sugar and butter, preparing cookie dough, kneading bread with DOUGH HOOKS.
6. **SPEED 5** – To whip cream, egg whites or mashed potatoes.

CARE AND CLEANING OF YOUR HAND MIXER

CAUTION: Do not immerse mixer in water or other liquid.

- Always switch off and unplug before cleaning.
- To make cleaning easier, remove BEATERS/DOUGH HOOKS and rinse immediately after use.
- Wash BEATERS/DOUGH HOOKS in hot soapy water or in dishwasher. Avoid using scouring pads, harsh detergents and abrasives. Dry with a soft, clean cloth.
- Wipe the MIXER BODY with a slightly damp cloth. **CAUTION:** Do not immerse in water.

LIMITED ONE-YEAR WARRANTY

Rival® warrants this product to be free from defects in materials or workmanship for one (1) year from date of original purchase. If you have a claim under this warranty please follow these procedures:

- 1) Within the first 45 days from date of original purchase, defective product should be returned to original place of purchase for replacement (with proof-of-purchase).
- 2) Within the first 12 months from date of purchase Rival® will repair or replace (at no charge) the defective product if it is delivered freight prepaid during that period to an authorized service station. To obtain warranty service contact our CUSTOMER SERVICE DEPARTMENT between 8:00 a.m. and 4:30 p.m. Central Standard Time, Monday through Friday (for prompt service have model number and sales receipt ready).

In U.S. call: 1-800-557-4825 / In Canada call: 1-800-561-6478

Or, you may write to Rival® c/o The Holmes Group, attention: Customer Service Department, P.O. Box 769, Milford, MA 01757. Proof of purchase is required when requesting warranty service - SAVE YOUR SALES RECEIPT. This warranty is extended only to the original purchaser and does not apply to commercial use, unreasonable use, or to damage to the product (not resulting from defect or malfunction) while in the possession of the consumer. Rival® disclaims all responsibility for consequential, incidental, or commercial losses caused by the use of this product. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

©2000, Rival
A division of The Holmes Group